

Note: Propeller Activity Board (#32910) and USB A to Mini B programming cable (#805-00006) required; not included.

Note: The "What's a Multicore Microcontroller?" text is still a work-in-progress. Chapters 1-6 are currently available to preview as a free PDF download (in Downloads and Documentation, below). The full version will become available at a later date.

Kit Contents:

- (1) - 2 GB MicroSD Card (#32319)
- (1) - 4-cell AA Battery Pack (#700-00038)
- (10) - 1 k-ohm 1/4 W 5% resistor (#150-01020)
- (4) - 10 k-ohm 1/4 W 5% resistor (#150-01030)
- (2) - 100 k-ohm 1/4 W 5% resistor (#150-01040)
- (2) - 2 k-ohm 1/4 W 5% resistor (#150-02020)
- (1) - 220 ohm 1/4 W 5% resistor (#150-02210)
- (1) - 470 ohm 1/4 W 5% resistor (#150-04710)
- (2) - 0.01 μ F poly capacitor (#200-01031)
- (2) - 0.1 μ F ceramic capacitor (#200-01040)
- (1) - 1000 μ F electrolytic capacitor (#201-01080)
- (1) - 3300 μ F electrolytic capacitor (#201-03080)
- (1) - 10 k-ohm single-turn potentiometer (#152-01031)
- (2) - Green LED (#350-00001)
- (1) - Bi-color LED (#350-00005)
- (2) - Red LED (#350-00006)
- (2) - Yellow LED (#350-00007)
- (1) - Phototransistor (#350-00029)
- (1) - 7-segment LED display (#350-00037)
- (2) - Pushbutton tact switch (#400-00002)
- (1) - 3-pin Header (#451-00303)
- (1) - 2N3904 transistor (#500-00001)
- (1) - 10 k-ohm digital potentiometer AD5220 (#604-00010)
- (2) - 3-inch jumper wires, bag of 10 (#800-00016)
- (1) - Piezo speaker (#900-00001)
- (1) - Parallax Standard Servo (#900-00005)